


Protective Shield Assembly Instructions



Step 1: Peel Plastic layer off both sides of the polycarbonate shield.

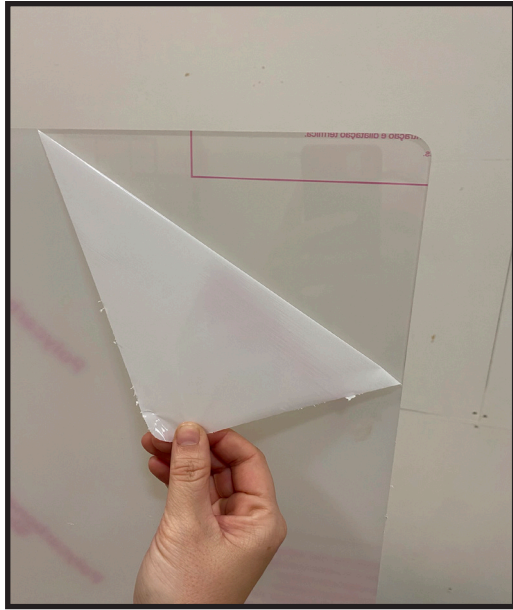

Step 2: Set the shield in place and mark reference points for drill holes. Using a drill and 1/4" drill bit, drill clearance holes into the front of the desired countertop for installation.



Step 3: Holding the shield in place, insert each of the 5 bolts through the screw holes with one washer on the face, one washer on the back and one nut on the back.



Step 4: Clean installation area of packaging and debris.

Care and Cleaning:

- Rinse polycarbonate with warm water.
- Apply water and mild soap mixture with a clean, lint free cloth/sponge.
- Wipe in a uniform up and down motion only.
- Rinse, repeat until clean with fresh water.
- Use a soft, lint free cloth to dry.

Warranty:

- At time of delivery, customer must inspect package and protective shield for damage.
- Report damages to orders@rogerswade.com within 24 hours of delivery, including order number and picture of damage.
- Failure to comply with these requests will void applicable warranties or replacements.
- Upon compliance of these requirements, we will ship a replacement shield
- All sales are final.